



# - Fine Tuning (Existing) Beaded Tops



- For Cup Gaping:
1. overcast stitches w/very strong waxed thread, pulling each stitch to reduce top of cup.
  2. Move halter or shoulder straps slightly in to ctr. or outside of underwire.
  3. Make a Dart or Slash (if no beading if Gaping).
  - 4 Reduce side strap Gapes w/overcast stiches

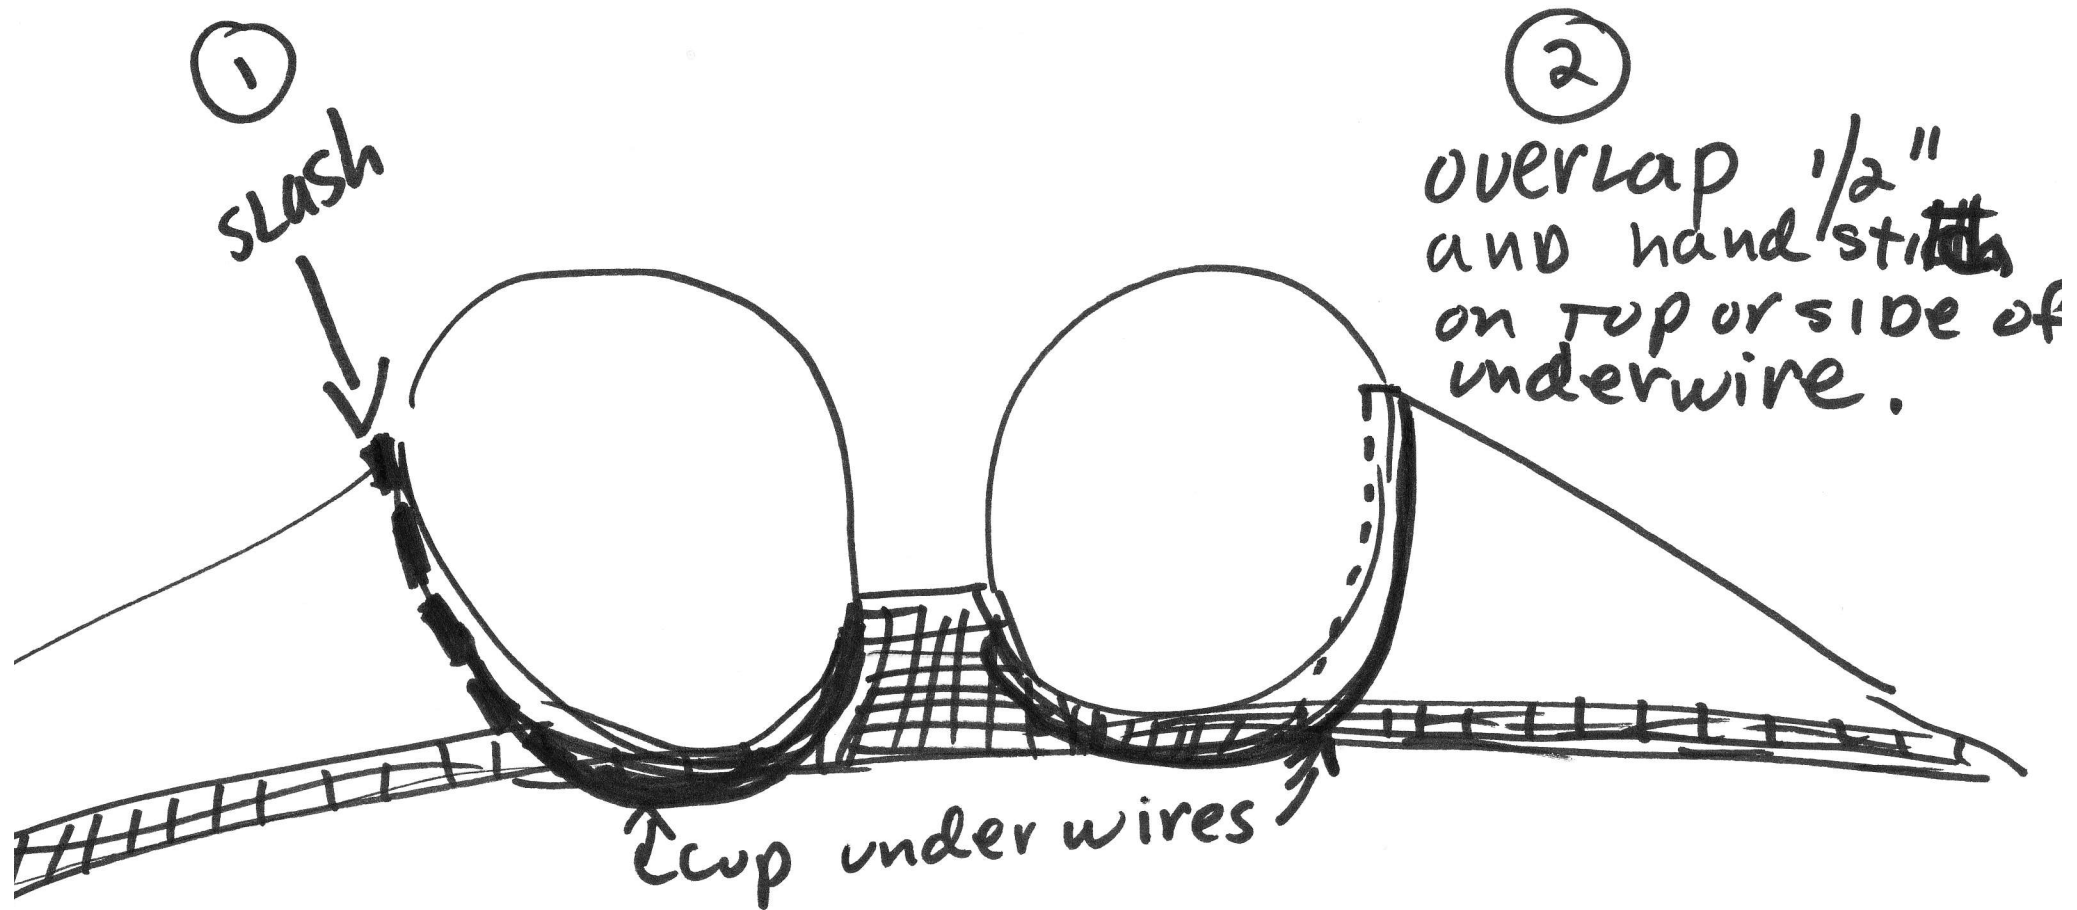

- When using existing side straps of Bra
- 1 slash at dotted line (just outside of under wire) and hand sew 1/2" of side strap over the under wire
  - 2

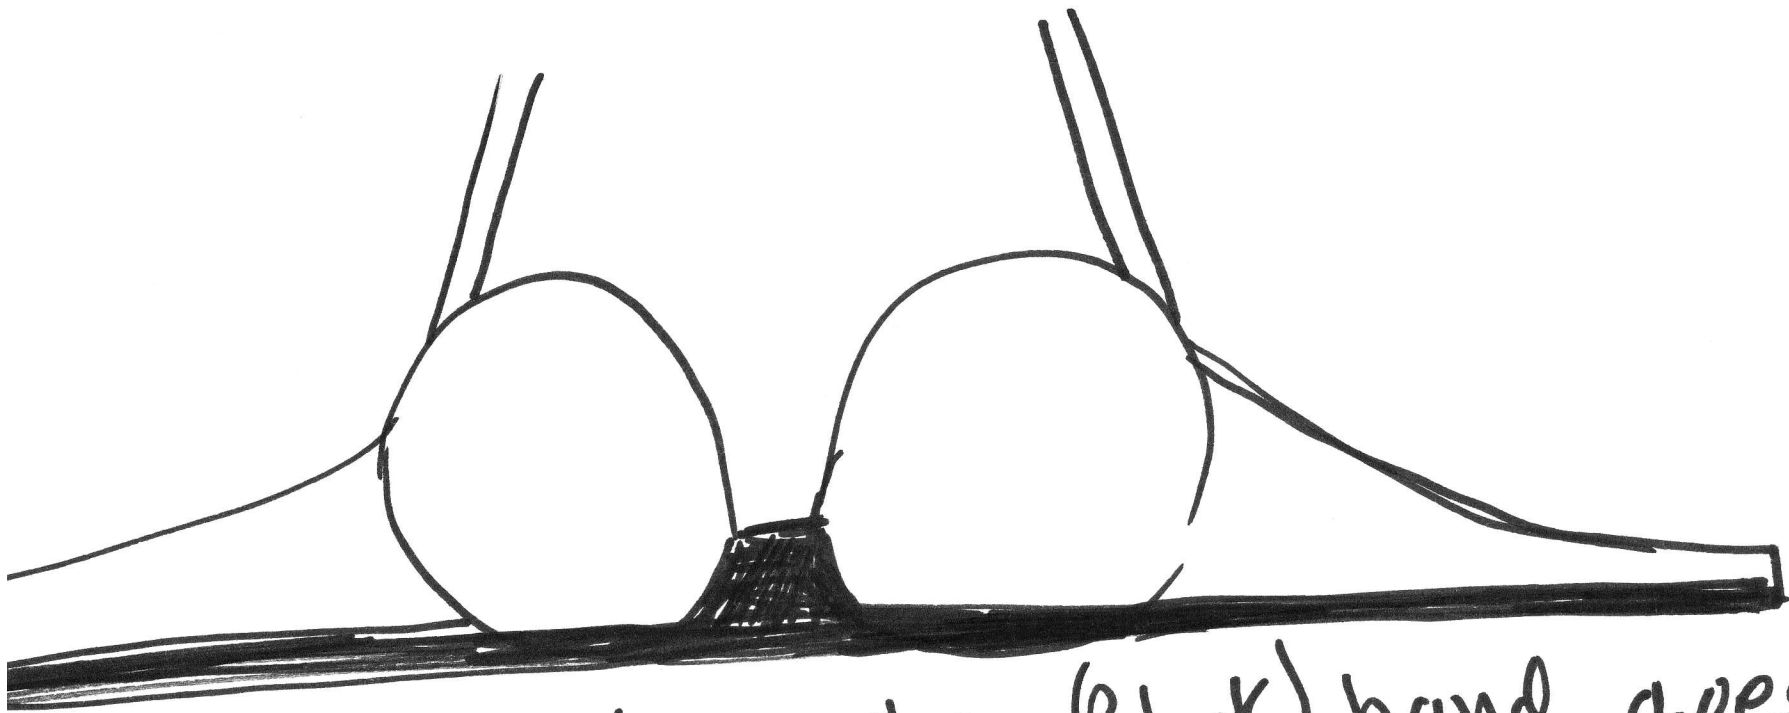

MOST supportive when (Black) band goes under Breasts and wraps around ribcage in one straight line.